




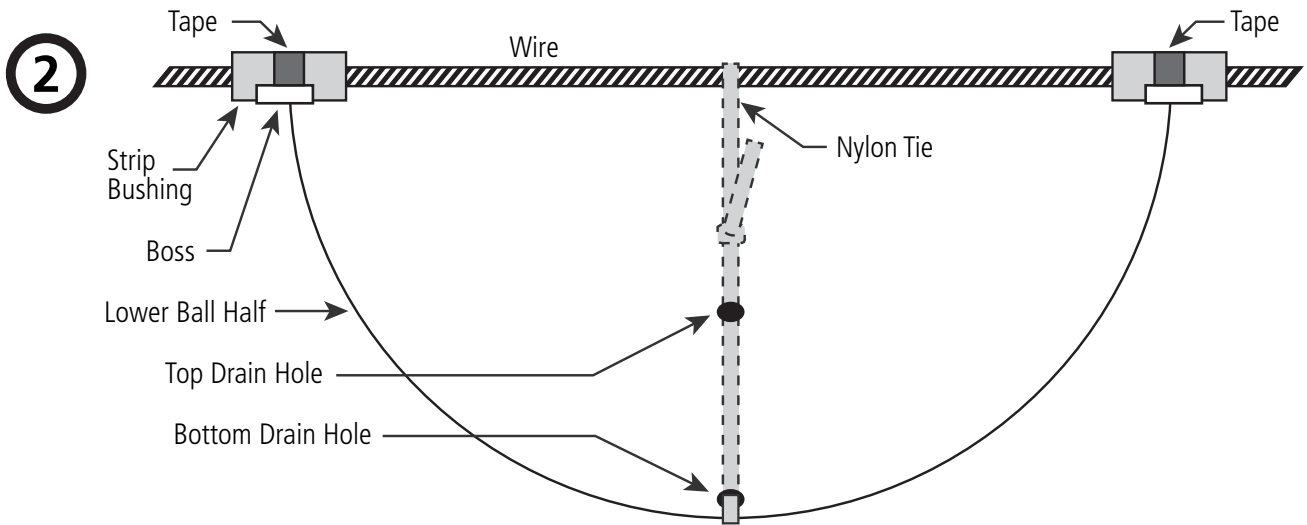

JX SERIES AERIAL MARKER BALL INSTALLATION INSTRUCTION SHEET

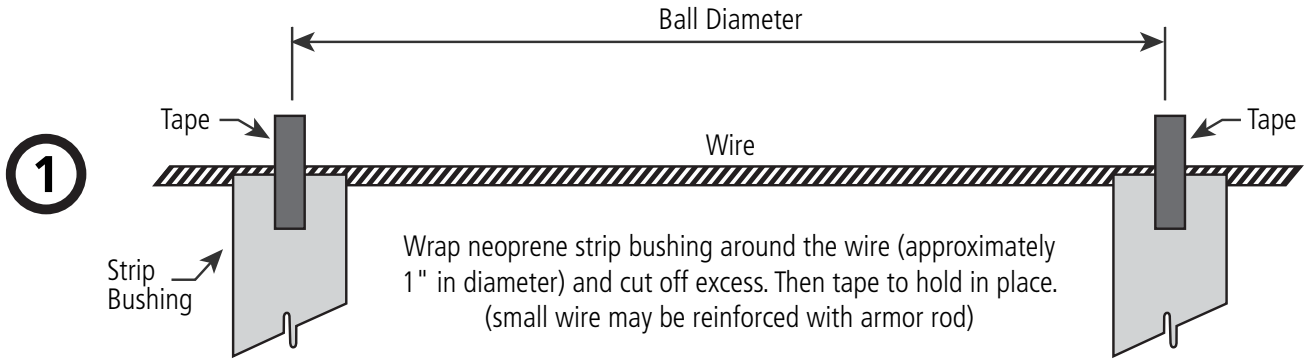

Thread the 24" nylon tie through the two bottom drain holes and secure to the wire. This should hold the lower half in place while the upper half is being installed. You may remove or leave the nylon tie after installation.

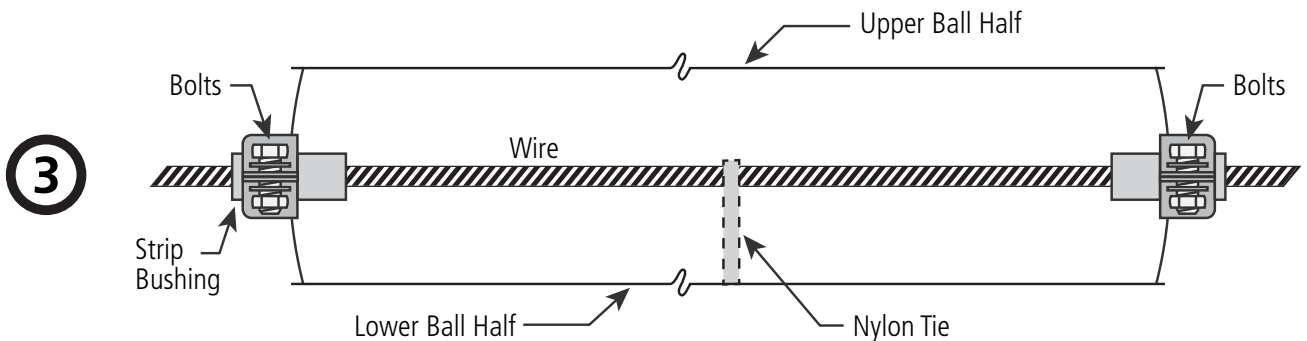

Put the upper ball half in place and install four 5/16" X 1" nylon bolts, nuts, and two flat washers per bolt, into the holes and torque to 26 inch-pounds.

WARNING: MARKERS SHOULD ONLY BE INSTALLED BY A QUALIFIED POWER COMPANY EMPLOYEE OR AUTHORIZED CONTRACTOR.